
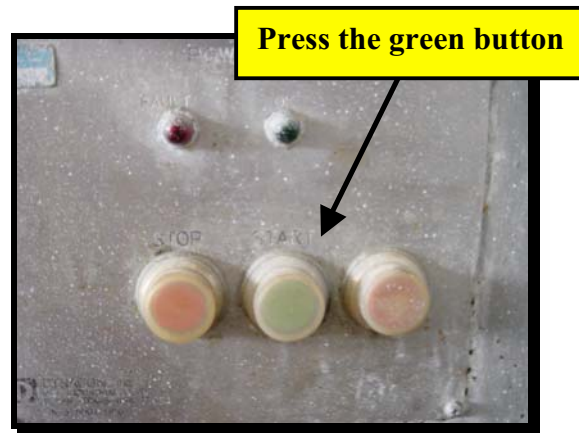


# Seismic Winches Operation Manual

**Rule #1: ALWAYS check the handle positions before you start up the hydraulic pump. Make sure the handles are centered and not stuck up or down !**

Go to the fantail. Switch on the power to the hydraulic pump. Do this by flipping up the handle on the small gray box, to ON position. On the other side of the motor box there are three buttons. Keep the middle one (the green one) pressed until you hear the motor start.

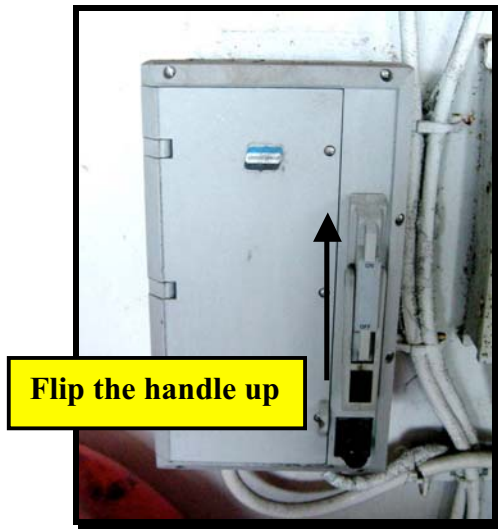

Be very careful with the winch handles. They are geared funny -it is very easy to get the cables to go way too fast.

